


# K95 RGB PLATINUM SE

机械游戏键盘 • MECHANICAL GAMING KEYBOARD

## 了解您的键盘

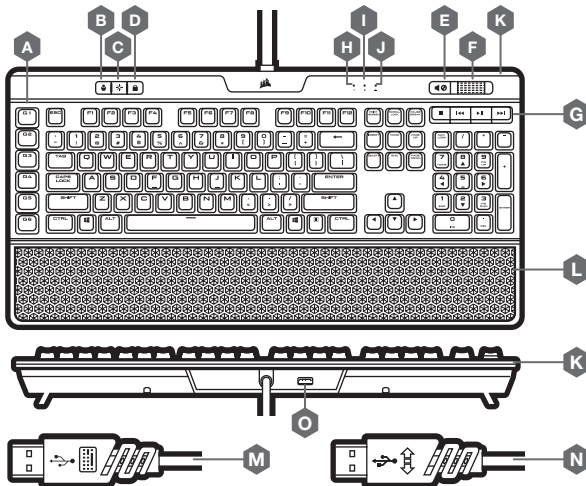

- A — 六个可编程宏定义键
- B — 设定档切换键
- C — 背光亮度键
- D — WINDOWS 键停用功能键
- E — 静音键
- F — 音量滚轮
- G — 专用的多媒体按键
- H — NUM LOCK LED 指示灯
- I — CAPS LOCK LED 指示灯
- J — SCROLL LOCK 指示灯
- K — LIGHTEDGE
- L — 可拆卸手腕靠垫
- M — USB 键盘连接器
- N — USB 连接器
- O — USB 端口

## 设定您的键盘

- > 启动电脑。
- > 连接 USB 键盘连接器到一个 USB 3.0 连接端口。
- > 若要使用键盘上的 USB 2.0 连接端口，请连接键盘的 USB 连接器到一个 USB 2.0/3.0 端口。
- > 从以下网址下载 iCUE 软件：[www.corsair.com/downloads](http://www.corsair.com/downloads)。
- > 执行安装程式。
- > 按照指示进行安装。

## 硬件播放

为多达三个设定档分配的 8MB 板载记忆体，储存复杂的操作或自订照明，无需软件即可执行。复杂的宏定义或按键重新对应以及照明效果，均可使用 iCUE 软件建立和储存回板载记忆体。使用设定档切换键循环所储存的板载设定档。

PROFILE #1	PROFILE #2	PROFILE #3
Gold Rush	Rain	Rainbow Wave

## CHINA RoHS

部件名称	产品中有毒有害物质或元素的名称及含量					
	铅 Pb	汞 Hg	镉 Cd	六价铬 Cr <sup>6+</sup>	多溴联苯 PBB	多溴二苯醚 PBDE
印刷电路板及电子组件	X	○	○	○	○	○
外壳	○	○	○	○	○	○
按键	○	○	○	○	○	○
连接线/配件	○	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

表中标有“X”的所有部件都符合欧盟 RoHS 法规“欧洲议会和欧盟理事会 2011 年 6 月 8 日关于电子电气设备中限制使用某些有害物质的 2011/65/EU 号指令”。

注：环保使用期限的参考标识取决于产品正常工作的温度和湿度等条件。



# K95 RGB PLATINUM SE




官方网站: [corsair.com](http://corsair.com)  
 技术服务热线: 400 841 7130  
 支持: [support.corsair.com](mailto:support.corsair.com)

博客: [corsair.com/blog](http://corsair.com/blog)  
 论坛: [forum.corsair.com](http://forum.corsair.com)  
 微信: CorsairRMA

© 2019 CORSAIR MEMORY, Inc. 版权所有。  
 实物可能与所示图片不同。进口商: 可赛尔(深圳)贸易有限公司  
 产地: 中国 | 产品: 键盘 | 49-001864 AB  
 © 2019 CORSAIR MEMORY, Inc. All rights reserved.



## GETTING TO KNOW YOUR KEYBOARD

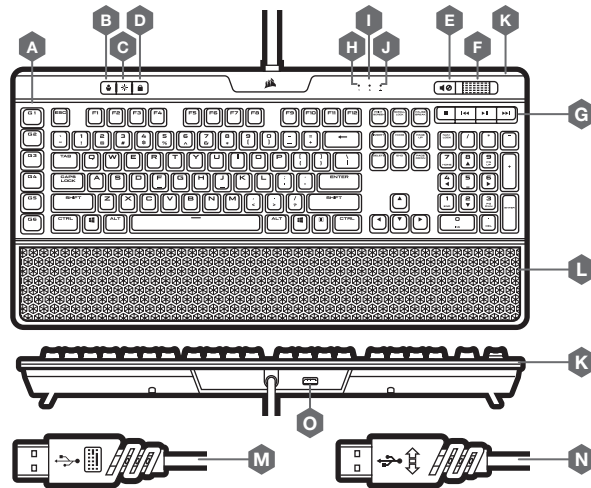

- A — SIX PROGRAMMABLE MACRO KEYS
- B — PROFILE SWITCH KEY
- C — BACKLIGHT BRIGHTNESS KEY
- D — WINDOWS KEY DISABLE
- E — MUTE KEY
- F — VOLUME ROLLER
- G — DEDICATED MULTIMEDIA KEYS
- H — NUM LOCK LED INDICATOR
- I — CAPS LOCK LED INDICATOR
- J — SCROLL LOCK INDICATOR
- K — LIGHTEDGE
- L — DETACHABLE WRIST REST
- M — USB KEYBOARD CONNECTOR
- N — USB PASS-THROUGH CONNECTOR
- O — USB PASS-THROUGH PORT

## SETTING UP YOUR KEYBOARD

- > Turn on your computer.
- > Connect the keyboard connector to one USB 3.0 port.
- > To take advantage of USB 2.0 pass-through port on the keyboard, please connect the keyboard's USB pass-through connector to one USB 2.0/3.0 port.
- > Download the Corsair Utility Engine (iCUE) software from [www.corsair.com/downloads](http://www.corsair.com/downloads).
- > Run the installer program.
- > Follow the instructions for installation.

## HARDWARE PLAYBACK

The 8MB of onboard memory allocated for up to three profiles stores complex actions or custom lighting which can be executed without additional software. Complex macros or key remaps as well as custom lighting effects can be created and saved back to onboard storage using iCUE software. Use Profile Switch Key to cycle through saved onboard profiles.

PROFILE #1	PROFILE #2	PROFILE #3
Gold Rush	Rain	Rainbow Wave